



Rubber Wheel Well Extensions Installation Instructions

Covers Parts #8081

Kit contents:

- Rubber wheel well extensions (4)
- 3x8mm FCS (24)
- 2.5mm drill bit

Tools needed:

- Body scissors (part #3431 (straight tip) or #3132 (curved tip), sold separately)
- 2.5mm hex wrench

Installation

Note: The narrow inner fenders (part #8080, sold separately) are required for installation of the rubber wheel well extensions.

1. Using the molded-in dimples in the screw bosses as a guide, drill holes into the inner fenders with a 2.5mm drill bit (included). Be sure to drill the holes straight into the screw boss (keep the drill bit at a 90° angle to the part as you drill out each hole) (Fig. A).
2. Install the wheel well extensions on the narrow inner fenders using the included 3x8mm FCS (Fig. B). The extensions are marked for correct installation: FL (front left), FR (front right), RL (rear left), RR (rear right) (Fig. C).
3. After installation, trim the wheel well extensions to fit your vehicle body using body scissors (Fig. D).

Fig. A

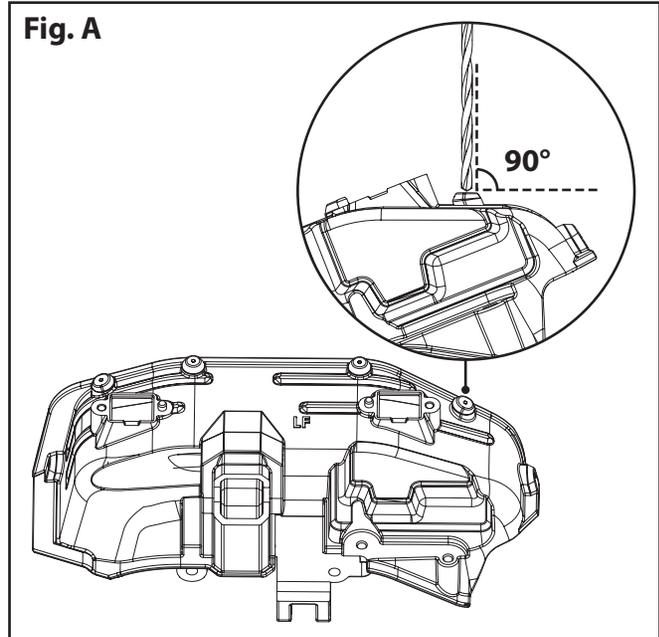


Fig. B

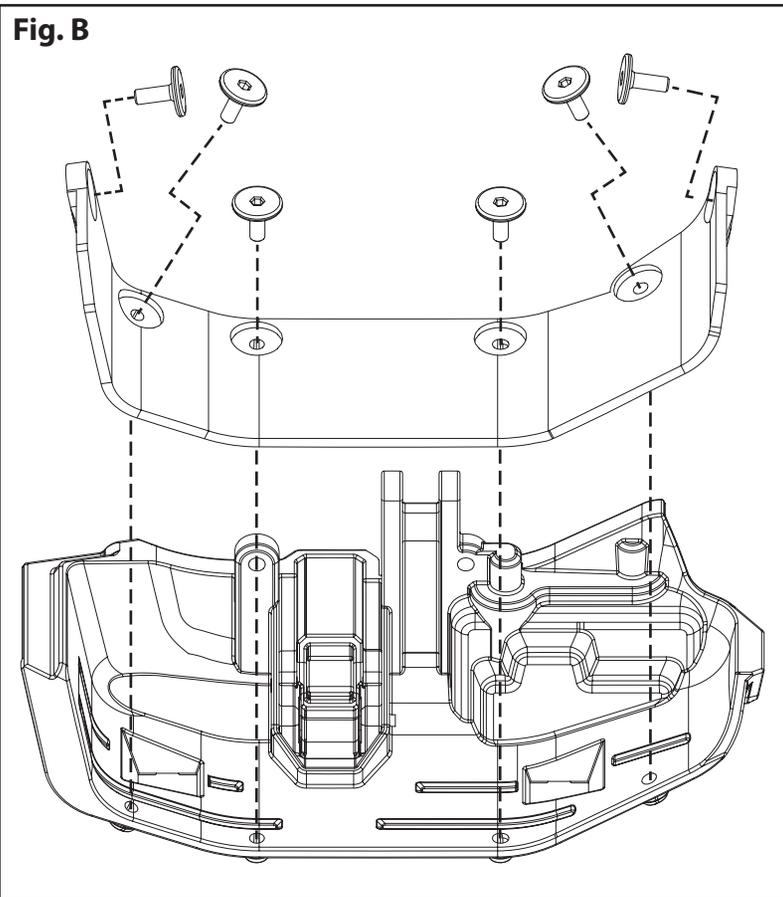


Fig. C

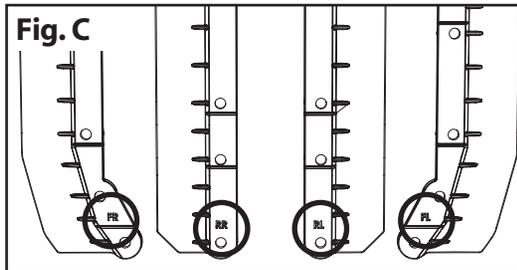


Fig. D

